


# Hood Brace Instructions


Haganauto.com 721 W. Monroe St. New Bremen, Ohio 45869

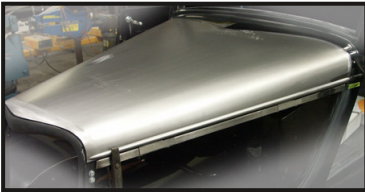

Kit contains: 1- brace 2- mount plates 4- screws



1. Hood must be installed with gaps and edges in proper. 2. Place brace under hood and mark the position of the mount plates. 3. Position the mount plates, mark, drill, and

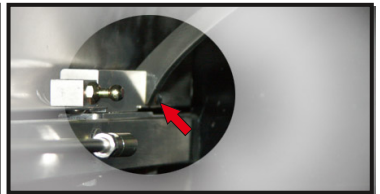

4. The screw heads should be flush with the panel. 5. Place hood back on and position brace with everything aligned, tack weld the



6. With the brace fully welded well. 7. Carefully remove the hood and un- 8. With the brace fully welded well, it back in place. 9. Hood brace installed.